

RELAY REPLACEMENT KIT #100798

Please read complete instructions before replacing components.

Parts Included

Part #	Qty	Description
100129	1	RELAY, 120V, 15A
10120	2	SCREW,MACH,PLTD,PAN,6-32X5/8
15507	2	NUT,KEP,#6-32

Tools Required

Red Robertson Screwdriver
#2 Phillips Screwdriver
Adjustable Wrench (Crescent Wrench)
Drill w/ 1/8" bit
Small Slot Screwdriver

Assembly Instructions

1. Turn main power switch on distiller off and unplug cord from wall.
2. Using the Phillips &/or Robertson screwdrivers, remove the distiller covers. This will require disconnecting the water feed line on 26-CT, 26D-8, and 26C-8 models. **ENSURE THE SADDLE VALVE IS CLOSED BEFORE DISCONNECTING WATER FEED LINE.**
3. Using a 1/8" drill bit, **CAREFULLY** drill through the rivets attaching the relay to the divider.
4. One wire at a time, using needle nose pliers, disconnect the wires from the old relay and attach them to the new relay, carefully noting the location and routing of each wire.
5. Using the screws and kep nuts included in your relay kit, attach the new relay to the divider, with the kep nuts on the inside.
6. Double check all connections to the relay by referring to the electrical schematic in your manual, and check to ensure that none of the wires interfere with fan motion.
7. Replace distiller covers. Reattach water feed line if it was removed and open saddle valve.

The distiller should now operate properly. If it does not, confirm that the wires are connected to the proper location by referring to your electrical schematic. If they appear correct, we suggest you take your distiller to an authorized service representative.

